


How to measure your Cellular Shade

“Inside” Mount shades are installed inside the window frame.

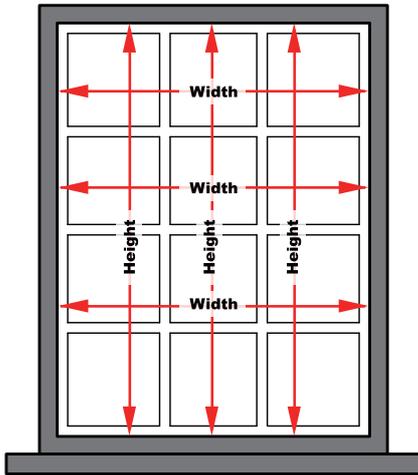

	Standard cord	Continuos loop	Cordless
Inside Mount minimum depth	1 1/4"	3/4"	3/4"
Inside Mount flush depth	2 "	2 "	2 "
Inside Mount width deduction	1/4"	1/4"	1/4"


Width

- Measure the exact width of the inside edges of the window frame from three different places; at the top, middle and bottom to the nearest 1/8".
Record the narrowest (smallest) measurement.
- **DO NOT** take off any deductions. The factory will take off necessary deductions for a perfect fit.

Height

- Measure the exact height of the inside edges of the window frame from three different places; at the left, center, and right to the nearest 1/8".
Record the longest of the three measurements.

“Outside” Mount shades are installed outside the window frame, covering an area bigger than the window size.

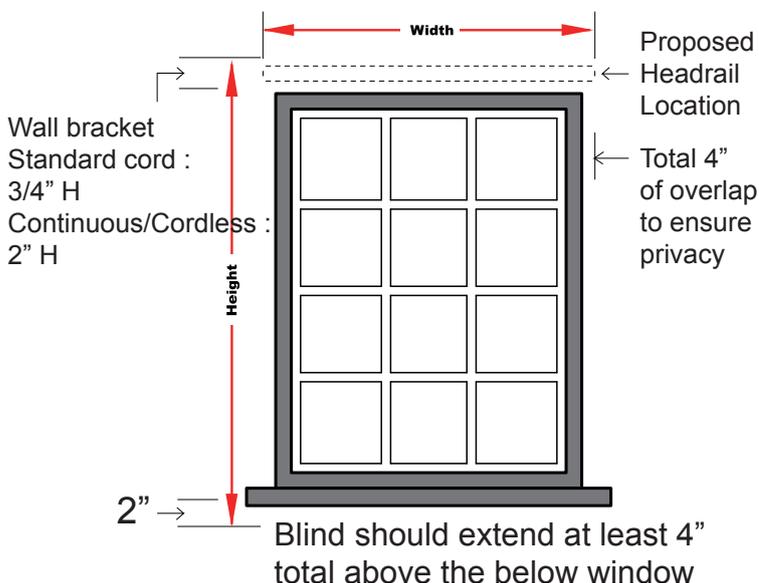

Width

- Measure the exact width to be covered, including the window frame. We “recommend” adding 2” on each side to provide the maximum light gap coverage.

Height

- Measure the exact width to be covered, including the top edge of molding to the bottom edge. We “recommend” adding at least 2” on top and 2” to the bottom (4” total overlap) to providethe maximum light gap coverage and space for wall mount bracket installation.